

User Manual
Please review before operating unit.

Air Mover
MODEL AM425-HV
Household and Workshop Use.

ATTENTION!

Read all safety rules carefully before attempting to operate.
Retain for future reference.

DANGER!

Never operate this unit when flammable materials or vapors are present because electrical devices produce arcs or sparks that can cause a fire or explosion. **NEVER OPERATE UNATTENDED.**

shop•vac[®]

BRAND

the **Original** wet/dry vac

AUTHORIZED SHOP-VAC SERVICE CENTRES

If your Shop-Vac Air Mover ever needs repair or maintenance during the warranty period or any time thereafter, there are Authorized Shop-Vac Service Centres located across the country (please see the enclosed separate pamphlet).

Do not attempt to service your Shop-Vac Air Mover beyond that described in the User Manual. For all other servicing, please refer to a qualified Shop-Vac Service Centre.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not expose to water or rain – store indoors.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not operate Air Mover with damaged cord or plug.
6. Do Not: pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug; not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. **WARNING!** To avoid injury or property damage: do not use around explosive liquids or vapors, as electrical devices produce arcs or sparks, which can cause a fire or explosion.
13. Do not store or use near flammable or combustible liquids such as gasoline, toxic, carcinogenic, combustible or hazardous materials such as asbestos, arsenic, barium, beryllium, lead, pesticides or other health endangering materials.

14. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
15. Operation of this unit can result in foreign objects being blown into eyes, which can result in eye damage. Always wear safety goggles when operating Air Mover.
16. STAY ALERT, Watch what you are doing and use common sense.
17. Do not use an extension cord with this Air Mover.
18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
19. Cleaning and user maintenance shall not be made by children without supervision.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
21. The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

READ AND SAVE THESE INSTRUCTIONS



WARNING - DO NOT LEAVE AIR MOVER UNATTENDED WHEN IT IS PLUGGED IN AND/OR OPERATING. UNPLUG UNIT WHEN NOT IN USE.

LIMITED TWO-YEAR WARRANTY

Shop-Vac warrants the air mover for two years from the date of purchase to correct by repair or parts replacement without charge, any product defect due to faulty material or workmanship provided that the air mover is not used for rental service. This warranty does not cover accessories. Simply return the complete unit, (transportation prepaid), to the Authorized Shop-Vac Service Centre nearest you (a complete list of Authorized Shop-Vac Service Centres is included with each air mover). Shop-Vac assumes no responsibility for damage or faulty performance caused by misuse or careless handling, or where repairs have been made or attempted by others. Proof of purchase date is required. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

DOUBLE INSULATION

Do not operate if cord, plug or appliance is damaged. In your double insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided nor should a means for grounding be added to the appliance.

NOTE: If power cord needs to be replaced, use only a Shop-Vac Service Agent.

OPERATION

⚠ WARNING - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THIS AIR MOVER WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

Follow these instructions to operate your air mover:

1. Unpack air mover from carton.
2. To use your unit, place the unit in the area most suitable for your application. Several factors need to be considered; the unit must be placed close enough to an AC outlet to be plugged in, there must be a minimum clearance of two feet from either side of the unit to allow for proper air flow, and the unit should not be placed where it can become a tripping or safety hazard.
3. Place unit in the proper operating position for your application. Refer to the Operating Positions section in this manual.
4. Plug unit into the wall.
5. Turn unit on and select air speed by turning the switch, located near the top handle, clockwise.
6. When your drying job is completed, turn the unit off and follow the directions for Storage in this manual.

OPERATING POSITIONS

The air mover may be set in one of three operating positions. Pick the position best suited for your application.

1. Use the down position (**Figure 1**) for applications such as; drying wet floors, shampooed carpets, etc. To use this position simply place unit on its base.
2. Use the angle position (**Figure 2**) for applications such as, drying plaster on walls or drying wet furniture. To use this position, tilt unit backwards so it rests on the support.
3. Use the up position for applications such as; drying paint on the ceiling. To use this position, lay the unit on the back side with the front grill pointing towards the ceiling (**Figure 3**).



CLEANING

⚠ WARNING - TO REDUCE THE RISK OF INJURY FROM THE AIR MOVER ACCIDENTALLY STARTING, UNPLUG POWER CORD BEFORE CLEANING.

The outside of the unit may be cleaned with a damp cloth to remove any dust or residue.

USER SERVICING INSTRUCTIONS

⚠ WARNING - BE SURE TO DISCONNECT POWER SUPPLY BEFORE ATTEMPTING TO SERVICE OR REMOVE ANY COMPONENTS.

Do not attempt to service your air mover beyond that described in the user manual.

LUBRICATION

No lubrication is necessary as the motor is equipped with lifetime lubricated bearings.

STORAGE

1. Before storing your air mover it should be cleaned. For cleaning instructions, refer to the Cleaning section in this manual.
2. Wrap the power cord around the carry handle on the top of the unit to keep it untangled (**Figure 4**).
3. If you have more than one unit to store they may be stored by stacking them. Stack the units by placing them on their sides making sure the indented side is facing down (**Figure 5**). Do not stack the units more than 4 high. Never operate the unit while it is on its side or stacked. **THE AIR MOVER SHOULD BE STORED INDOORS.**

