

TANOVA CARE & MAINTENANCE

Use and Maintenance

For kitchen bins, if using a liner, take care to ensure the liner does not become entangled in the unit's drawer runners.

Regularly remove crumbs, sticky residue or other matter from near and on runners using a soft brush or damp cloth.

Be familiar with the load capacity of your Tanova unit and do not exceed it. (Load capacities for Tanova units are on our website.)

When opening and closing your Tanova unit or when adding items to the bucket or hamper, do not apply strong downward force (such as pushing waste down with force to pack more into the bucket) as this may damage the runners.

Take care not to damage painted surface of the metal frames and laundry hampers with hard or metallic objects. If you do chip the paint, it is recommended that the chip is repaired with a touch-up paint as recommended by a reputed paint supplier.

Cleaning Your Tanova Kitchen Waste Bin or Laundry Hamper

Do not use caustic cleaners on any part of your Tanova unit.

Some dishwasher powder and laundry powder are particularly caustic, as are dry salt, salt water and any citrus juice. If they spill onto your Tanova unit frame, or onto your steel laundry hamper, remove the powder promptly with a soft brush or damp cloth taking care to re-wipe the surface clean after rinsing cloth free of substance.

Painted steel parts – clean with a soft brush or cloth, using warm water and a mild soap such as dishwashing liquid, which will help break down any stains. Avoid harsh chemicals.

Powder coated aluminium parts - clean with a soft brush or cloth, using warm water and a mild soap such as dishwashing liquid, which will help break down any stains. Avoid harsh chemicals. Wiping with a microfibre cloth is also a good dusting/cleaning method.

Plastic buckets/hampers – to avoid odours, regularly wash out with warm water and dishwashing liquid, rinse well and dry. If possible, leaving to dry in the sun is a great idea. Plastic buckets and hampers are dishwasher safe.