



The warranty covers manufacturing defects, standard finishes but excludes plated finishes or finishes exposed to a corrosive environment. The warranty excludes damage caused by installation contrary to written instructions and incidental or consequential damage. We recommend regular cleaning with mild detergent.

Fitting instructions:

Select Fixing Position

Select position for Doorchain above or below doorknob (within reach of children).

A Recommended marking distance between slide and keeper plate is 10mm (min) and 50mm (max).

Fixing Slide Plate

Locate slide plate with chain entry hole furthest away from door edge. Mark and then drill four 2.5mm holes, screw slide plate in position.





3 Fixing Keeper Plate

Locate keeper plate on doorjamb at the same height as slide plate. Mark and drill two 2.5mm holes, screw keeper in position.





ASSA ABLOY New Zealand Limited 6 Armstrong Road, Albany Auckland 0632, New Zealand www.yalelock.co.nz For customer feedback: info.nz@assaabloy.com

An ASSA ABLOY Group brand



ASSA ABLO