



M18™ FLOOD LIGHT

TO REDUCE THE RISK OF INJURY, USER MUST READ AND UNDERSTAND OPERATOR'S MANUAL.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING READ AND UNDERSTAND ALL INSTRUCTIONS. When using electric appliances, basic precautions should always be followed, including the following:

Before using the flood light, read this operator's manual, your battery pack and charger operator's manual, and all labels on the battery pack, charger and flood light.

- Read and understand all the instructions before using the appliance.
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Store idle flood light out of reach of children. Warm flood lights can become hazardous in the hands of children.
- Do not use outdoors.
- For a rechargeable appliance - Use only the charger supplied by the manufacturer to recharge.
- Know your flood light. Read this manual carefully to learn your flood light's applications and limitations as well as potential hazards associated with this type of tool.
- Batteries must be recharged only with the charger specified by the manufacturer. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- Use flood light only with specifically designated battery pack. Use of any other batteries may create a risk of fire.
- When battery pack is not in use, keep it away from metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire.
- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

SAVE THESE INSTRUCTIONS

SYMBOLGY	
V	Volts
---	Direct Current

⚠ WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Inserting/Removing Battery Pack

Insert the battery pack by sliding battery pack into the body of the tool. Insert the battery pack until the battery latches lock.

To remove the battery pack, press in both battery latches and slide the battery pack off of the tool.

⚠ WARNING To reduce the risk of injury, do not look directly into the light when the flood light is on.

Operation

To turn on the flood light, press the ON/OFF button ①. The light will default to high mode. Press the ② button for the low setting. Press the ③ button for the high setting. To turn off the flood light, press the ON/OFF button ① again.

If the flood light does not turn on with a fully charged battery pack, remove the battery pack for one minute and then reinsert to reset the floodlight.

Hang/Mount

There are many ways to orient the flood light to best suit your job.

- Hang or hold the flood light from the top handle.
- Set the flood light on one of eight sides.
- Use the key-hole to hang the flood light on a screw.
- The notch in the side bar can balance the floodlight on a wire.
- Mount on a user-built stand using a 19mm (3/4") bar.
- String up on a wire run through the pass-through holes.

MAINTENANCE

⚠ WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact your authorised MILWAUKEE dealer for ALL repairs.

Maintain Flood light

Keep your flood light, battery pack and charger in good repair by adopting a regular maintenance program. If the flood light does not work properly, return the flood light to a MILWAUKEE dealer.

⚠ WARNING To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

Cleaning

Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

ACCESSORIES

⚠ WARNING Always remove battery pack before changing or removing accessories. Only use accessories specifically recommended for this tool. Others may be hazardous.

For a complete listing of accessories refer to your MILWAUKEE Electric Tool & Equipment catalog or go online to www.milwaukeetools.com.au or www.milwaukeetools.co.nz. To obtain a catalog, contact your local authorised MILWAUKEE dealer.

LIMITED WARRANTY - AUSTRALIA AND NEW ZEALAND

Please refer to Australian and New Zealand Warranty Terms and Conditions supplied with the tool.

This warranty applies to product sold in Australia and New Zealand.

SERVICE

MILWAUKEE prides itself in producing a premium quality product that is Nothing But Heavy Duty®.

Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised MILWAUKEE dealer.

MILWAUKEE ELECTRIC TOOL CORPORATION

13135 Lisbon Road, Brookfield,
Wisconsin, U.S.A. 53005

MILWAUKEE ELECTRIC TOOL CORPORATION (Australia)

Techtronic Industries (Australia) Pty. Ltd.
Doncaster, Victoria, Australia, 3108

MILWAUKEE ELECTRIC TOOL CORPORATION (New Zealand)

Techtronic Industries (New Zealand) Pty. Ltd.
Mangere, Auckland, New Zealand, 2022

Professionally made in China by Milwaukee Electric Tool Corp.