



LED LANTERN AND FLOODLIGHT

TO REDUCE THE RISK OF INJURY, USER MUST READ AND UNDERSTAND OPERATOR'S MANUAL.

IMPORTANT SAFETY INSTRUCTIONS

WARNING READ AND UNDERSTAND ALL INSTRUCTIONS. When using electric appliances, basic precautions should always be followed, including the following:

- Before using the lantern, read this operator's manual, your battery pack and charger operator's manual, and all labels on the battery pack, charger and lantern.
- **Read and understand all the instructions before using the appliance.**
- **To reduce the risk of injury, close supervision is necessary** when an appliance is used near children.
- **Store idle lantern out of reach of children.** Warm lanterns can become hazardous in the hands of children.
- **Do not use outdoors where the tool may be exposed harsh environments, direct sunlight or water.**
- **Know your lantern.** Read this manual carefully to learn your lantern's applications and limitations as well as potential hazards associated with this type of tool.
- **Batteries must be recharged only with the charger specified by the manufacturer.** A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- **Use lantern only with specifically designated battery pack.** Use of any other batteries may create a risk of fire.
- **When battery pack is not in use, keep it away from metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause sparks, burns, or a fire.
- **Maintain labels and nameplates.** These carry important information. If unreadable or missing, contact a MILWAUKEE® service facility for a free replacement.

SAVE THESE INSTRUCTIONS

SYMBOLGY	
V	Volts
---	Direct Current

WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Inserting/Removing Battery Pack

M12
To **insert** the battery, slide the pack into the body of the tool. Make sure it latches securely into place.

To **remove** the battery, push in the release buttons and pull the battery pack away from the tool.

M18
To **insert** the battery pack, slide the battery pack into the body of the tool until the battery latches lock.


To **remove** the battery pack, press in both battery latches and slide the battery pack off of the tool.

WARNING To reduce the risk of injury, do not look directly into the light when the lantern is on.

Power
Use the Power button to cycle through the High/Medium/Low settings. Press and hold the Power button for about 2 seconds to activate the strobe setting.

Adjusting
Turn the beam adjustment ring to rotate the LEDs between 180° (task lighting) and 360° (area lighting).

USB Port
To charge a phone or other electronic device using the 2.1A USB port, plug in the USB and press the USB power button. The port will remain ON for about 2 hours.

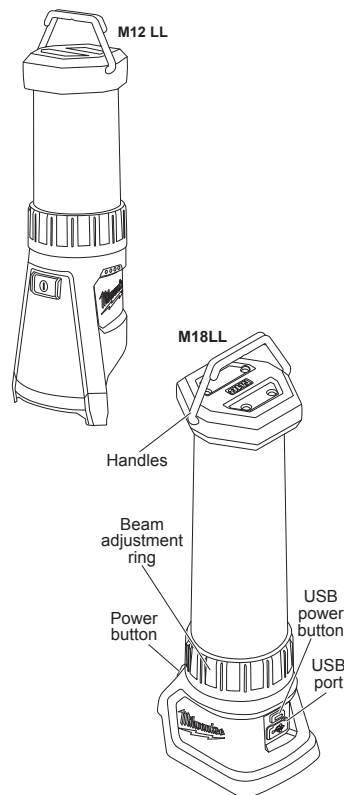

MAINTENANCE

WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact a MILWAUKEE® service facility for ALL repairs.

Maintain Lantern

Keep your lantern battery pack and charger in good repair by adopting a regular maintenance program. If the lantern does not work properly, return the lantern to the store where the product was originally purchased or one of our authorised MILWAUKEE® service centres.

WARNING To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

Cleaning
Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

ACCESSORIES

WARNING Always remove battery pack before changing or removing accessories. Only use accessories specifically recommended for this tool. Others may be hazardous.

For a complete listing of accessories refer to your MILWAUKEE® accessories catalogue or go online to www.milwaukeetools.com.au or www.milwaukeetools.co.nz. To obtain a catalogue, contact the store where the product was originally purchased or one of our authorised MILWAUKEE® service centres.

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to Australian and New Zealand warranty supplied with tool. This warranty applies only to product sold in Australia and New Zealand.

AUSTRALIA AND NEW ZEALAND MILWAUKEE® Service

MILWAUKEE® prides itself in producing a premium quality product that is Nothing But Heavy Duty®. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised MILWAUKEE® dealer.

For a list of MILWAUKEE® dealers, guarantee or service agents please contact MILWAUKEE® Customer Service or visit our website.
(Australia Toll Free Telephone Number 1300 361 505)
(New Zealand Toll Free Telephone Number 0800 279 624) or visit www.milwaukeetools.com.au / www.milwaukeetools.co.nz.

Milwaukee Electric Tool Corporation
13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Electric Tool Corporation (Australia)
Techtronic Industries (Australia) Pty. Ltd.
Doncaster, Victoria, Australia, 3108

Milwaukee Electric Tool Corporation (New Zealand)
Techtronic Industries (New Zealand) Pty. Ltd.
Mangere, Auckland, New Zealand, 2022

Professionally made in China for Milwaukee Electric Tool Corporation