



## Steel Drywall Cart | Operation Manual

**WARNING:** Read and become familiar with this manual BEFORE operating unit.  
Failure to do so could result in serious property damage and or serious bodily injury.

# contents

## Steel Drywall Cart

Warning & Instructional Information	3
Components & Product Specifications	4
Care & Maintenance	4
Assembly & Use	5
Parts Index	7





**WARNING!**

**READ ALL SAFETY WARNINGS AND ALL INSTRUCTIONS BEFORE OPERATING THIS EQUIPMENT. FAILURE TO UNDERSTAND AND FOLLOW THE WARNINGS AND INSTRUCTIONS MAY RESULT IN MISUSE OR FAILURE OF THE EQUIPMENT. MISUSE OR FAILURE OF THE EQUIPMENT WHILE THE CART IS LOADED CAN RESULT IN OVERTURNING THE CART AND LOAD, POTENTIALLY RESULTING IN SERIOUS PROPERTY DAMAGE AND/OR SERIOUS BODILY INJURY.**

- It shall be the responsibility of the owner of the Intex Cart to keep the product maintained.
- As with any material handling equipment, **ALWAYS WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT** when operating the Intex Cart. Failure to do so could result in serious injury.
- **DO NOT ATTEMPT TO USE YOUR INTEX CART IF ANY PART IS MISSING, DAMAGED OR WORN. ORDER A REPLACEMENT PART IMMEDIATELY.** Using a Intex Cart with missing, damaged or worn components can result in failure of the unit and possibly serious property damage and/or serious bodily injury.
- **THE WEIGHT CAPACITY OF THE INTEX CART IS 1,360kg (2,998 lbs). DO NOT LOAD THE UNIT BEYOND THIS LIMIT.** Failure to follow this warning can result in damage to the cart contributing to a sudden failure of the cart and possibly serious property damage and/or serious bodily injury.
- **THE LOAD SIZE CAPACITY OF THE INTEX CART IS 48" (1.2m) FROM THE LOAD SUPPORT FRAME. DO NOT LOAD THE UNIT BEYOND THIS LIMIT OR WITH MATERIALS THAT EXCEED THIS LIMIT.** Failure to follow this warning can result in destabilising of the loaded cart. Such destabilising of the loaded cart can result in failure of the cart and/or overturning of the cart and possibly severe property damage and/or serious bodily injury.
- **OPERATE THE INTEX CART ONLY ON HARD, FLAT, LEVEL SURFACES FREE OF OBSTRUCTIONS, DEBRIS, CLUTTER, PITS, HOLES OR OPENINGS.** Failure to follow this warning can result in tipping the cart and load possibly resulting in serious property damage and/or serious bodily injury.
- **WHEN MOVING A LOADED INTEX CART, ALWAYS PUSH THE CART. NEVER PULL THE LOADED CART TOWARD THE OPERATOR. WHEN MOVING ANY LOADED CART, UNFORESEEN AND UNANTICIPATED CIRCUMSTANCES CAN ARISE WHICH CAN RESULT IN UNANTICIPATED MOTION AND/OR DESTABILISING OF THE LOADED CART.** Such unanticipated motion and/or destabilising of the loaded cart can result is failure of the cart and/ or overturning of the load and possibly severe property damage and/or serious bodily injury.
- When moving a loaded Intex Cart, **ALWAYS** keep nearby personnel aware of and clear of the cart's motion to avoid being struck and possibly injured by the loaded cart or load.
- The Intex Cart is made of steel which conducts electricity. **KEEP THE UNIT AWAY FROM LIVE ELECTRICAL WIRES.** Failure to do so could result in electrocution.
- Use only Intex authorised replacement parts. Installation of other parts can compromise the safe design of the Intex Cart and may cause failure of the unit possibly resulting in serious property damage and/ or serious bodily injury. Use of non-manufacturer authorised replacement parts will void all warranties.

## INTEX CART COMPONENTS & SPECIFICATIONS

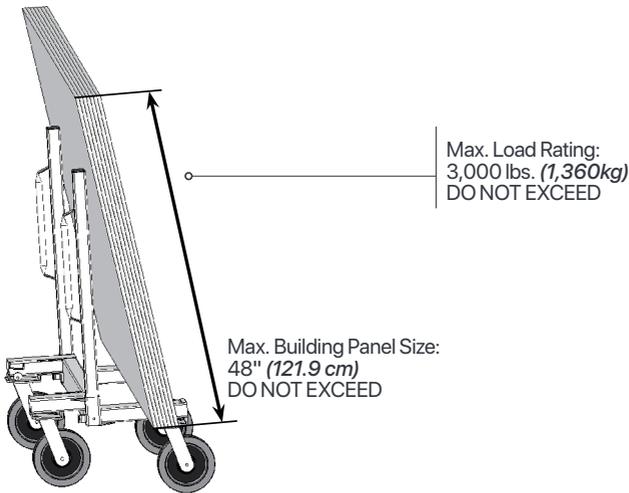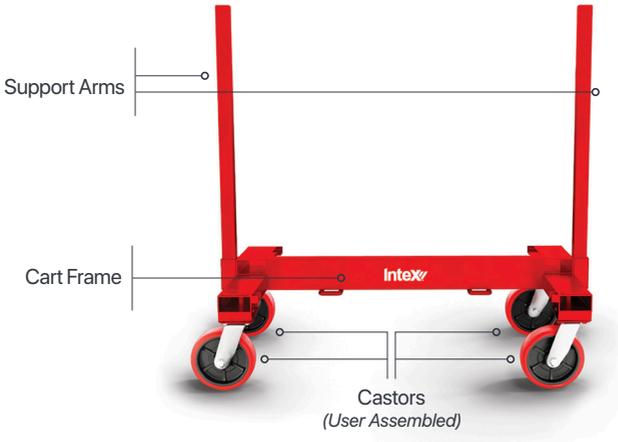


## CARE & MAINTENANCE

Inspect **FREQUENTLY** (at least daily and before each use):


- Inspect castors **FREQUENTLY** (at least daily and before each use) for proper operation of all rollers and bearings. For castors equipped with brakes and swivel locks, check these for proper operation.
- Inspect castors **FREQUENTLY** (at least daily and before each use) for secure attachment to the cart frame. Tighten all castor fasteners securely if necessary.
- Inspect the latch pins that secure the upright arms in the working position for proper operation. Repair or replace when necessary to maintain proper function.
- Occasionally oil the castor bearings.
- Take reasonable care to avoid damaging the Intex Cart when transporting or using it.

## ASSEMBLY & USE


**1.** For initial assembly fasten all castors securely with four bolts per castor.

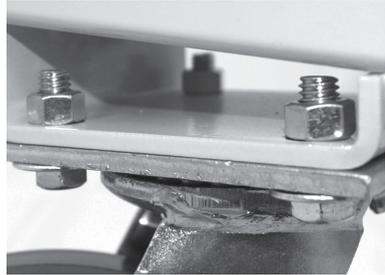

**2.** Press the release tab to remove the upright arms from the storage and transport position.

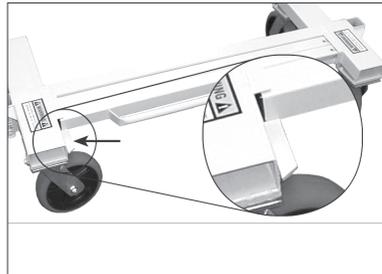

**3.** Lock the support arms in the upright position when loading building boards and similarly configured materials.

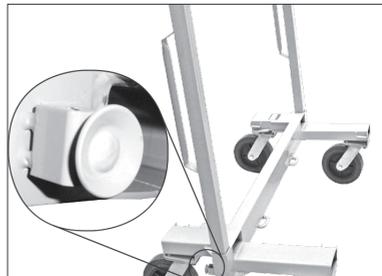

## ASSEMBLY & USE

4. When moving the cart while loaded, ALWAYS push the loaded cart away from the operator. NEVER pull the loaded cart toward the operator.




5. The support arms can be stowed and positioned to configure the cart for use as a manoeuvrable flatbed.



6. With the arms stowed and locked in the storage and transport position, the cart can be conveniently handled for compact transportation.



## PARTS INDEX

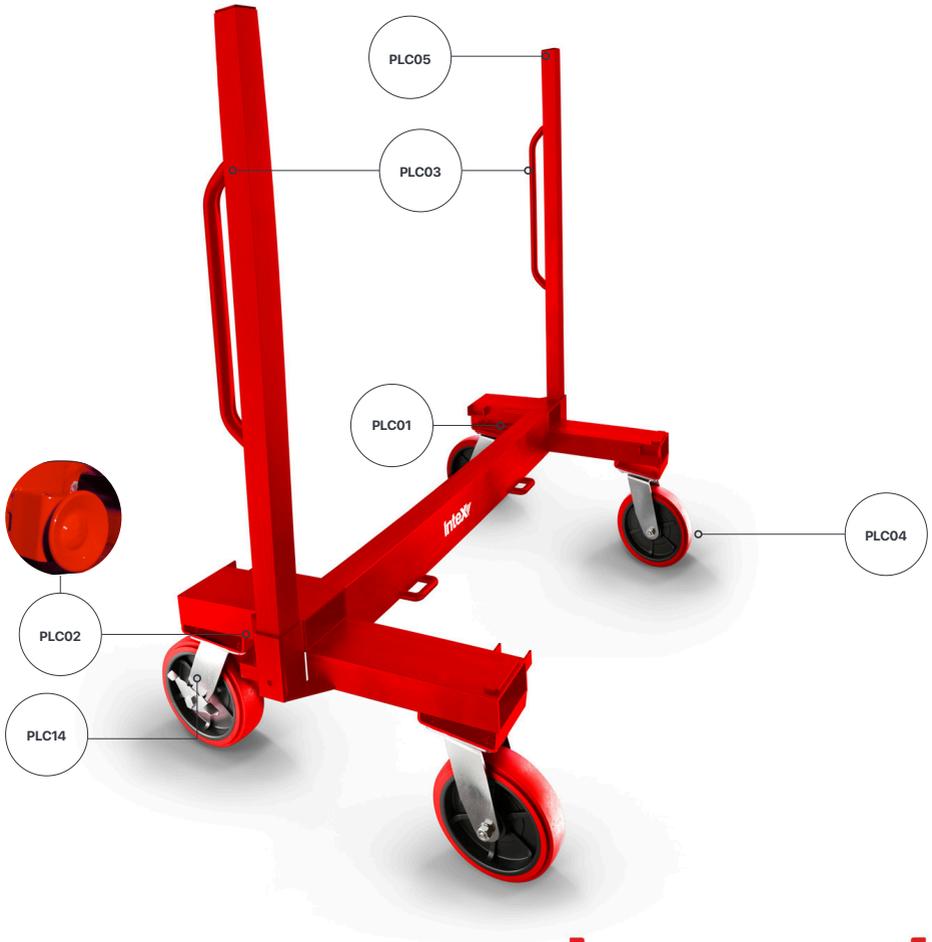

Part #	Name
PLC01	Upright Storage Latch
PLC02	Upright Latch Assembly ( <i>Pull Pin</i> )
PLC03	Upright Tube
PLC04	Swivel 8" Castor
PLC05	Upright End Cap
PLC14	Swivel-Locking / Braking Castor



# Thank you for choosing an Intex product!

To register your warranty, complete our online form @ [intexinternational.com](https://intexinternational.com) or scan QR below.



## Warranty Statement:

Intex Group International Pty Ltd (*Intex*) guarantees that all products manufactured by and or for Intex shall be free from defects under normal use. Your registered warranty means that the product you have purchased is covered against such defects, in accordance with any specific warranty period and conditions stated in the manual enclosed with the product.

## Warranty may invalidate due to:

- Expiry of the warranty period.
- Incorrect and unsuited product use (*i.e. not in accordance with Intex operation manual*).
- Unfulfilled specified product service or maintenance requirements.
- Careless and unsuited product handling (*i.e. damage caused by impacts, falls and climatic influences*).
- Wear and tear to normal wearing parts (*e.g. brushes, bearings, sleeves, consumable accessories etc*).
- Battery Pack faults or defects after 700 charging cycles (*even if identified inside the warranty period*).
- Product changes or modifications made from the new and original state without prior written approval from Intex.
- Service and or repairs performed by non-Authorised Intex Service Agents and or personnel.
- Non-original and genuine Intex spare parts, accessories and or consumable materials used.
- The product not being manufactured by and or for Intex.
- The product not being purchased from Intex or an Authorised Intex Reseller.
- Intex and or the Authorised Intex Reseller not having been paid in full for the product.

To find a local Authorised Service Agent, view the warranty claim process or read our terms and conditions visit [intexinternational.com](https://intexinternational.com)



[intexinternational.com](https://intexinternational.com)



