



Weiss Limited

## FH30SS-FH30WH

Bathroom fan heater

230-240 VAC 50Hz

### FITTING INSTRUCTIONS

Thank you for purchasing this quality Bathroom Fan Heater by Weiss™. With your Weiss Bathroom Fan Heater correctly installed and maintained you can be assured of trouble free operation.

### PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE COMMENCING INSTALLATION.

Note: Pictures and diagrams in the instructions and on packaging are designed only to be used as a concept. All installation details should be carried out as per the instructions herein.

### SUITABILITY

The Weiss Bathroom heater has been designed for wall mounting in bathrooms, showers and laundries.

### BEFORE YOU START

Refer to Australian and NZ wiring regulations standard AS/NZS 3000:2000 which covers accessories in damp situations such as bathrooms, showers, laundries and other areas with fixed water containers.

### IMPORTANT SAFETY NOTE

If this appliance does not have a plug included with the supply cord, appropriate means of disconnection are required to be incorporated into the fixed wiring. The supply cord of this equipment cannot be replaced. If the supply cord is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

1. When used by, or near, young children or infirm persons, close supervision is necessary. Young children should be supervised to ensure that they do not play with the appliance.
2. Use this appliance only for its intended use.
3. Don't cover or obstruct in any way the grilles on this unit, as this may block entry or exhaust airflow.
4. Don't insert anything into any opening to remove dust, lint or fluff.
5. Don't allow the supply cord to come into contact with heated surfaces during operation.
6. Only connect this appliance to the voltage specified on the rating label.
7. Don't touch hot surfaces or moving parts.
8. The heater must NOT be located immediately below or in front of a socket outlet.
9. The heater is to be installed so that the switches and other controls cannot be touched by a person in the bath or shower.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible of their safety.

### OPERATION OF THE FAN HEATER


The On/Off operation of this heater is controlled by the pull-cord switch. Pull the pull-cord to switch the heater on and off. The Blue LED indicator lights when the heater is operating. An automatic internal step-down thermostat will reduce the output of this appliance when a comfortable room temperature is reached. This temperature can be adjusted before the heater is fitted onto the wall mount by turning the thermostat shaft on the under side of the heater. Turning Clockwise increases the cutout temperature.

Weiss Limited reserves the right to alter designs and specifications without notice or penalty	Regulations require the electrical work be carried out by authorised persons	Please retain these instructions for future reference
------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------	-------------------------------------------------------

Weiss Limited, 20B Arwen Place, East Tamaki  
PO Box 204-120 highbrook Auckland  
New Zealand  
Tel: (09)2744113, Fax (09) 2741880  
Website: www.weiss.co.nz

Revision 05:2015-5-12

©Weiss Limited 2015

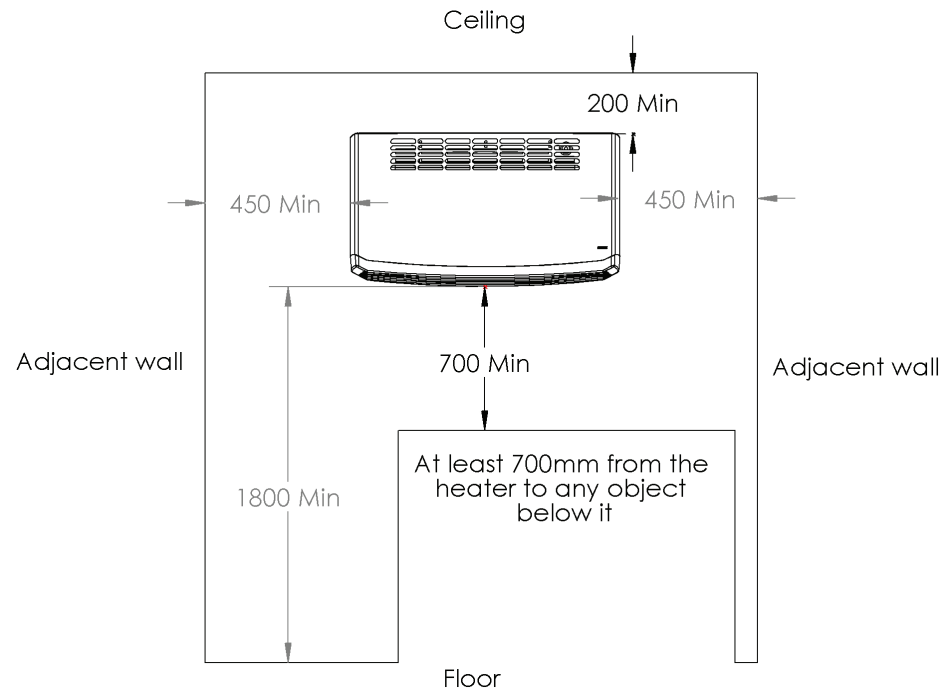

### MINIMUM MOUNTING DISTANCES

When choosing a location for the heater the following minimum mounting distances must be observed:  
At least 1800mm from the floor up to the heater.  
At least 200mm from the heater to the ceiling  
At least 450mm from any adjacent walls  
At least 700mm from the heater to any objects below it.

### INSTALLATION

To attach the heater to the wall:  
Remove the wall mounting base from the heater. Secure the mounting base to the wall using the screws provided. The base supplied with the heater must be used when attaching the heater to the wall. See diagram above for important minimum installation distances.

The electrical connection of this product must be completed by an authorised person and must comply with all local electrical regulations.  
The heater is to be installed so that all switches and other controls can't be touched by a person in the bath or shower.  
After wiring is complete locate the heater on the mounting base and screw into position.

### CLEANING

1. The heater requires regular cleaning to ensure trouble free operation.
2. Isolate the heater from the mains power supply.
3. Use a damp cloth to clean the exterior of the heater. Do NOT use any abrasive cleaners.
4. Every 3 months use a vacuum cleaner to remove dust, lint and fluff from the heater inlet and outlet grilles. Failure to observe this procedure will invalidate the warranty.
5. Ensure the heater is dry before turning the mains power supply to the heater back on again


Weiss Limited reserves the right to alter specifications and instructions at any time without notice or penalty.



**FH30SS/FH30WH  
Installation and Operating Instructions**

**This appliance must be installed in accordance with the relevant electrical wiring rules and regulations.**

**A registered Electrician must be used to install this product and a COC is required for a warranty claim.**

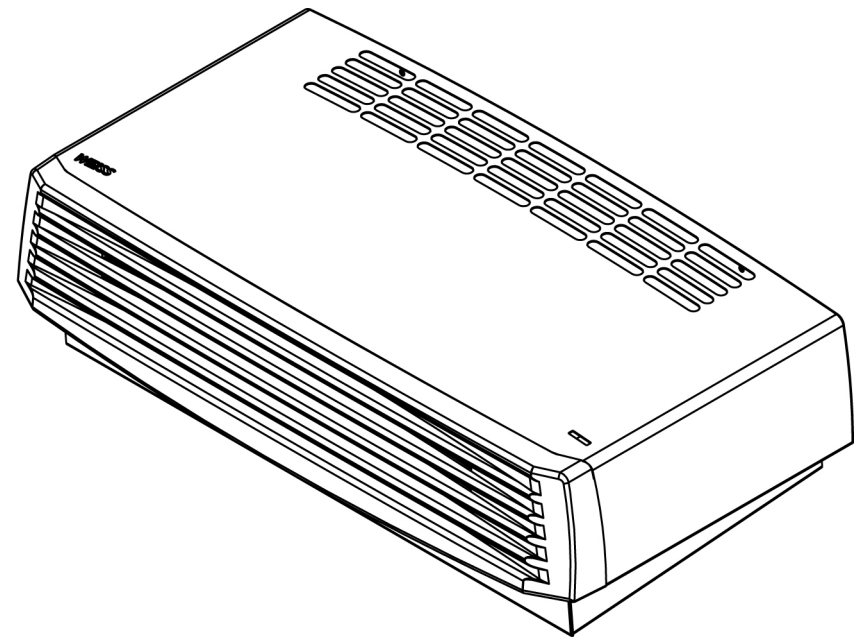

**For your safety please follow the Installation and operating Instructions**