

Shower Rose Instructions




This unit contains a flow restrictor at the entry point to the showerhead. For **low and unequal pressure** applications the flow restrictor may need to be removed to obtain satisfactory shower performance.

To determine if the flow restrictor needs to be removed or not


1. Remove the existing shower head from the arm.
2. Set the shower to the temperature you normally shower at.
3. Time how long it takes to fill a 10 litre bucket.

LESS THAN 45 seconds to fill a 10 litre bucket

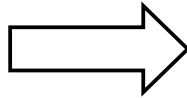

Do not remove the flow restrictor

MORE THAN 45 seconds to fill a 10 litre bucket

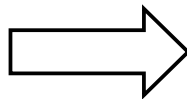

Do remove the flow restrictor see below

To remove the restrictor

