

Pro-Drain 8

The protection board that creates a neutral pressure zone between the foundation wall and subsoil.

Installation instructions



To hold sheets in place, apply Neutral Cure adhesive to raised dimples.



100 Primer and tak spray can also be used. Check compatibility with substrate.



Place dimples against wall surface. Sheets can be laid horizontally or vertically.



100 Primer & Protecto Tape




A Chased Metal Flashing can be used to terminate the top of the ProWall & ProDrain8.



OPTIONAL: Top edge can be sealed using 100 Primer and Protecto Tape to stop foreign material falling into cavity.

Plaster or apply water based paint over Protecto Tape within 90 days of installation.

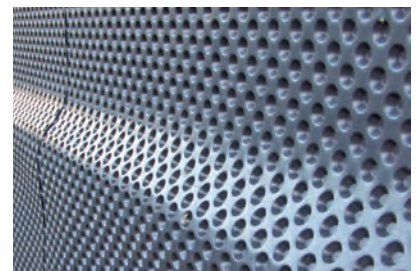

Benefits of Pro-Drain 8 Foundation Protection

- Quick & easy to install.
- Provides continuous protection to the membrane.
- Follows contours of the substrate.
- Close dimple spacing provides high compressive strength – 250 kN/m² (25 t/m²) and stability.
- Provides drainage over the wall surface.
- Extremely durable.
- Resistant to a wide range of chemicals, impervious to root penetration, rot proof and unaffected by soil bacteria & fungi.
- Non-polluting for drinking water.