

## **Application**

For built-in panels sliding on a single track, i.e. wardrobes and cupboards in residential, heavy duty applications.

Easy height adjustment.

Silent operation - nylon wheeled bearing hangers and aluminium track.

## Panel Specification

Track System: Wardrobe Single 50 For Individual Panels: Max Panel Height 2400mm Max Panel Width 900mm Max Panel Weight 50kg Panel Thickness 16-40mm

Lightly framed timber panels or panels made from medium density fibreboard (MDF) must have provision for hangers to be screwed securely to the back face of the panels

## Standard Sets and Packs

Sets comprise of top track, hangers, door stop(s), sawcut guide(s), all timber screws and fitting instructions.

Wardrobe Single 50:

Panel width Hardware for Track Length WS50-12/1 1200mm 600mm 1 panel WS50-15/1 750mm 1500mm 1 panel WS50-18/1 900mm 1800mm 1 panel

Pack No.

Pack of fittings only, without track. WS50-1PK

## **Hardware Specification**

Material Aluminium, Mill

 $1200 \mathrm{mm}, 1500 \mathrm{mm}, 1800 \mathrm{mm}, 2400 \mathrm{mm}, 3000 \mathrm{mm}$  and  $3600 \mathrm{mm}$ Standard lengths

550, 551, 552 Hangers (2 per panel):

Nylon tyred ball race bearing with zinc plated plates face fitted to the back of the panel. Vertical adjustment  $10 \mathrm{mm}.$ 

Nylon safety door stop prevents fingers being jammed on bi-passing panels

Guide in white nylon, comes in two parts that fit on both sides of the panel.

The guide is floor mounted.

Accessories:

Alternative Guide 101N

The nylon guide is designed to slide through a 20mm deep by 5mm wide sawcut in the bottom rail of the panel. The guide is fitted on the floor at the edge of the


opening in the overlap area. The guide has lateral adjustment.


Channel and Guide 81 and 113N/81


113N/81 guides in white nylon. For heavy duty applications or where more than 3 panels are required per opening. 81 channel, aluminium, available in 1200mm, 1500mm, 1800mm, 2400mm, 3000mm and 3600mm lengths.

Pelmet in pearl white on aluminium. Hooks onto track, no screws required. Supplied with End Caps. Available in 1800mm and 3050mm lengths.

Made from high impact glass reinforced nylon polystyrene. The End Caps are a push-fit onto the pelmet.

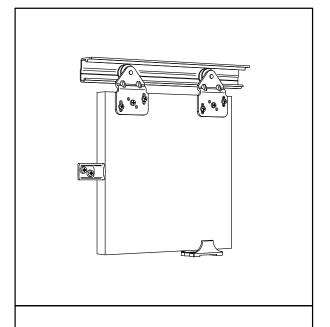

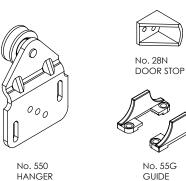

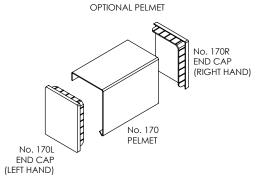

### ALTERNATIVE GUIDES




No. 101N **GUIDE** (INCLUDED IN SETS AND PACKS)




No. 113N/81 GUIDE AND No. 81 CHANNEL



PANEL THICKNESS (PT)	22	25	29	32	35	38	40
DIMENSION 'A'	4	7	11	14	17	20	22
DIMENSION 'B' (PT + 9)	31	34	38	41	44	47	49

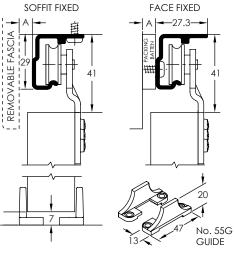

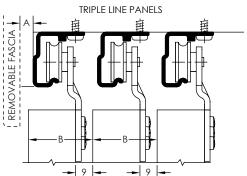


TYPICAL APPLICATION WITH OPTIONAL No. 170 PELMET



track. Included in

No. 552






## INSTALLATION INSTRUCTIONS


# Prepare Panels

Door width = (Opening width / No. of panels) + 10mm (Overlap) For single panels + 10mm overlap each end. Panel height = Opening height less 53mm Track length = 2 x Opening width + Overlap




### 2 Fit Track

Panel thickness determines dimension 'A' - see table Face fix - fit track parallel to floor, packing batten 'A' mm thick Soffit fix - fit track 'A' mm from the outside edge of a level and flat lintel




### 3 Fix Hardware to Panel

Align the plate shoulder level with the top edge of the panel. Screw 2 screws only in the centre of the slotted holes to give ±5mm vertical adjustment,




#### Fix Panel & Adjust 4

Hook panel onto track. Adjust hangers to obtain maximum floor clearance. When panels are hanging plumb and square fit a 3rd screw into one of the hanger locating holes



## Fit Guide and Door Stop

With panel hanging plumb fix guide to overlapping area of opening. Screw holes facing inward under panel. Panels under 18mm thick, screw holes facing outward. Position door stop at 2/3 of panel height.



## Optional Pelmet

The pelmet hooks onto the track and the end caps simply "push fit" into position. For face fix only. Notch packing batten for a closer fit to the panel.

