



# GENERAL CLEANING AND MAINTENANCE

## BEFORE YOU BEGIN

Regular cleaning of your Englefield product is recommended and will help to avoid the build up of dirt and grime that can damage and reduce the life of the product.

**To keep your product in good condition, it is recommended that residual water spots should be removed from all surfaces after each use. This can be achieved by using a soft squeegee or sponge.**

For tougher stains or grease build up, a solution of mild soap and hot water should be used with a soft cleaning cloth.

To protect your product, cleaning solutions that contain the following should be avoided :

- Abrasives
- Alcohol
- Solvents
- Bleach
- Citrus
- Harsh chemicals and disinfectants
- Ammonia or peroxides
- Acid or alkaline

## CAREFULLY READ ALL INSTRUCTIONS OF CLEANERS BEFORE APPLYING TO PRODUCT SURFACES

Many bathroom cleaners may contain chemicals that could adversely affect the finish so should only be used with caution at the consumers risk.

## RECOMMENDED CLEANING PROCEDURES

### Acrylic surfaces (baths and shower trays)

To clean acrylic surfaces use non abrasive soap and water.

It is recommended that the product surface is wiped dry after each use to prevent the build up of soap and scum.

### Glass (shower doors)

Glass is porous and this provides an ideal surface for shower grime to adhere. This can result in permanent staining of the glass.

It is recommended that a squeegee or dry towel is used to dry the glass after each use.

### **Aluminium extrusions (shower door frames)**

Regularly wash down aluminium extrusions with a solution of warm water and mild soap to prevent the build up of grime. Grime build up retains contaminated moisture which can result in a chemical attack of the surface over time.

### **Spa baths**

It is recommended that spa bath jet cartridges are regularly removed and cleaned to remove build of hair and grime. Detailed instructions are provided in the home owners and installation instructions of your product.

It is recommended that the product surface is wiped dry after each use to prevent the build up of soap and scum.

### **Toilets**

If you live in a hard water area, you should make certain that the holes in the rim are kept clean to ensure proper pan flushing.

Toilet cleaners should be used at least once a week. Use a long handled brush to clean the rim holes and to clean as far into the trap as possible to prevent mineral deposits from forming.

Most toilet cleaners are not harmful to the vitreous china surface of the toilet pan, however Kohler does not recommend the use of any cleaning products which are submerged in the cistern as the acids contained within the cleaner will prematurely deteriorate gaskets and valve parts.

Please follow any pan cleaner manufacturer's instructions carefully.

### **Tapware**

Clean the surface with mild soap and warm water, rinse thoroughly with warm water and then wipe dry with a clean soft cloth. The ideal cleaning technique is to always blot dry any water from metal surfaces.

Allowing water to evaporate on metal will form water deposits. It is important to use a dabbing action to dry metal, not an abrasive rubbing action.

### **VC basins**

To clean vitreous china surfaces use non abrasive soap and water.

It is recommended that the product surface is wiped dry after each use to prevent the build up of soap and scum.

### **Durastone and polymarble vanity tops**

To clean Durastone and polymarble cast vanity surfaces use non abrasive soap and water.

It is recommended that the product surface is wiped dry after each use to prevent the build up of soap and scum.

In the event of light scratches in the surface of the top, a mild abrasive such as “Meguiars Mirror Glaze 28 All Metal Polish” can be used to polish them out.

### **Vanity cupboards**

The material used in vanity cabinets is water resistant only, not water proof.

Care must be taken to clean up all water spillage onto the vanity cabinet surfaces.

To maintain the finish on your vanity cabinet clean with mild soapy water and dry with a soft cloth.

For warranty information, please visit our website

Australia

[www.inglefield.com](http://www.inglefield.com)

New Zealand

[www.inglefield.co.nz](http://www.inglefield.co.nz)



## **CALL US FOR HELP**

---

NEW ZEALAND  
KOHLER NZ LTD  
Free Ph : 0800 100 382  
Free Fax : 0800 664 488  
[www.inglefield.co.nz](http://www.inglefield.co.nz)

AUSTRALIA  
KOHLER CO.  
Free Ph : 1 800 228 476  
[www.inglefield.com](http://www.inglefield.com)

# STANDARD JET OPERATION AND MAINTENANCE

## GENERAL


- Regular cleaning of spa jet fittings is recommended to avoid the build up of soap scum, grime and debris.
- The use of abrasive cleaning products and tools should be avoided as this can damage the jets.
- These instructions contain important care, cleaning, and warranty information-please leave these instructions for the consumer.

## JET OPERATION

Water flow from back jets and side jets can be individually adjusted to suite your individual bathing requirements. Simply rotate the inner ring of the jet to increase or decrease the water flow.

Side jets also incorporate an adjustable eyeball to allow the direction of water flow to be optimised. Simply use your finger to adjust the eyeball direction.


Rotate to adjust flow rate

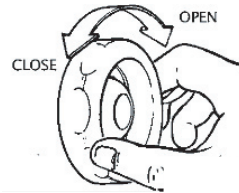

Angle eyeball to direct

## TO DISASSEMBLE AND CLEAN JETS


- 1 Push the eyeball in using the thumb.

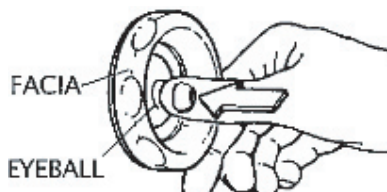


- 2 While holding the eyeball in, gently lever the fascia off, either by hand or using an instrument that will not damage the bath or the fascia. The eyeball and washer come off with the fascia.




- 3 Pull the sleeve and spring out of the jet body. Note the sleeve may be jammed in place by debris and long nose pliers may be needed to remove it.

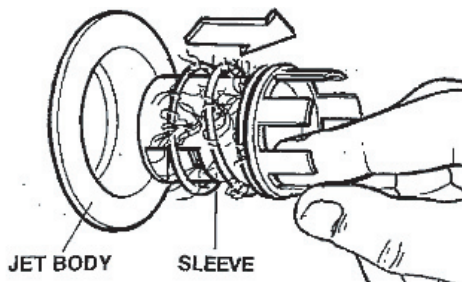


- 4 Slide the spring off the sleeve.

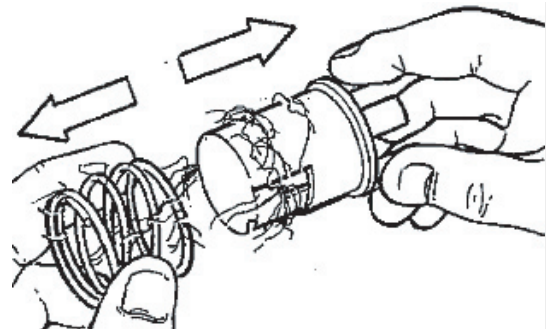

- 5 Clean out any hair or grime from inside the jet body.

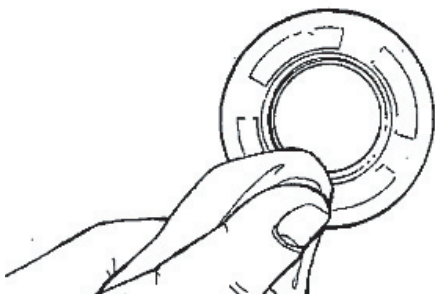


- 6 Clean off any hair or grime from the sleeve, spring, eyeball, washer and fascia with a clean cloth.

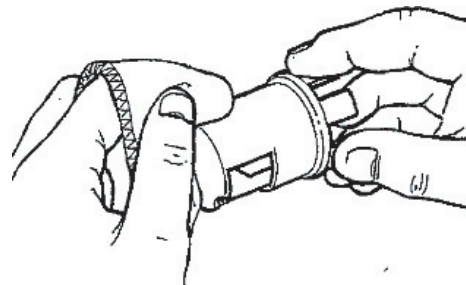


## TO REASSEMBLE JETS


7 Re-assemble the spring over the sleeve.

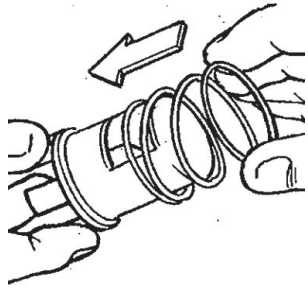


8 Replace the spring and sleeve into the jet body.

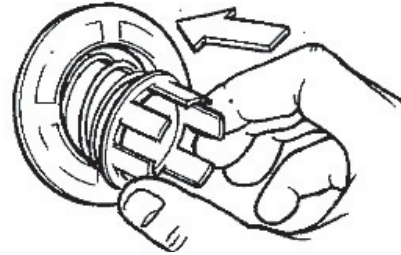


9 Re-assemble the two halves of the eyeball and fit into the sleeve. Ensure the front half is to the outside.

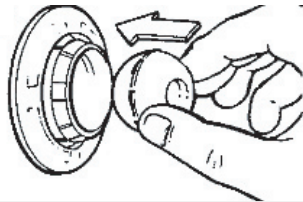

10 Holding the eyeball in place, gently push the fascia back into the jet body until it clicks into place.

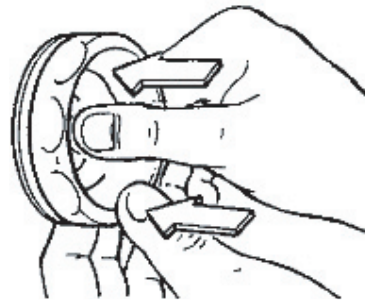

## SERVICABLE PARTS

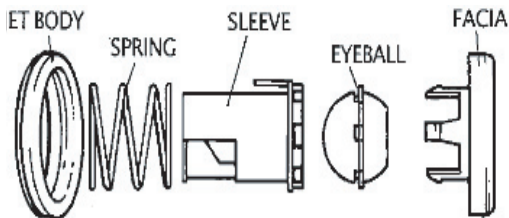

|                    |                                     |   |            |
|--------------------|-------------------------------------|---|------------|
| Jet cartridge      | - Wonder jet chrome                 | - | T1180-CP   |
| Back jet cartridge | - Non scalloped chrome              | - | 1054010-CP |
| Back jet cartridge | - Non scalloped chrome (restricted) | - | 1054227-CP |

Exploded assembly view of jet.

## CONTACT AND WARRANTY INFORMATION

For warranty information, please visit our website.

Australia  
[www.inglefield.com](http://www.inglefield.com)

New Zealand  
[www.inglefield.co.nz](http://www.inglefield.co.nz)

## CALL US FOR HELP

NEW ZEALAND  
 KOHLER NZ LTD

Free Ph: 0800 100 382  
 Free Fax: 0800 664 488  
[www.inglefield.co.nz](http://www.inglefield.co.nz)

AUSTRALIA  
 KOHLER CO.

Free Ph: 1 300 362 284  
 Free Fax: 1 300 652 284  
[www.inglefield.com](http://www.inglefield.com)