


AP1414 Installation


Installs in 15 Minutes

1

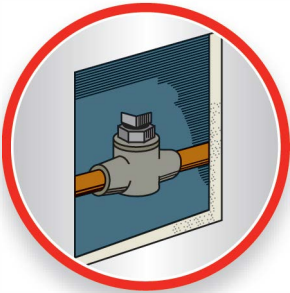

Unfold the enclosed sheet. Trim the dotted lines at top and bottom and use as an 14" x 14" template. Outline template, then cut along lines.

2

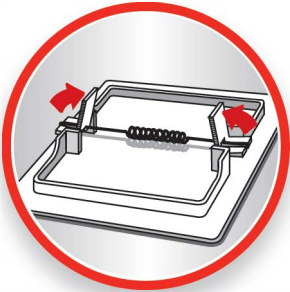

Flip clips up as shown.

3



Align panel's inside ledge with bottom of opening, then push panel against wall. To remove, simply pull out at opposite corners. **NOTE:** If the panel will be used frequently, paint the raw edges of the wall/ceiling with latex or oil-based paint for greater durability.

- Conceals household plumbing, wiring and cables.
- Super-easy to install, no framing required.
- Works in walls and ceilings up to 3/4" thick.
- Great for spa pumps, security systems, computer/audio/TV cables.
- Pops in and out of position, no visible clamps or screws.