

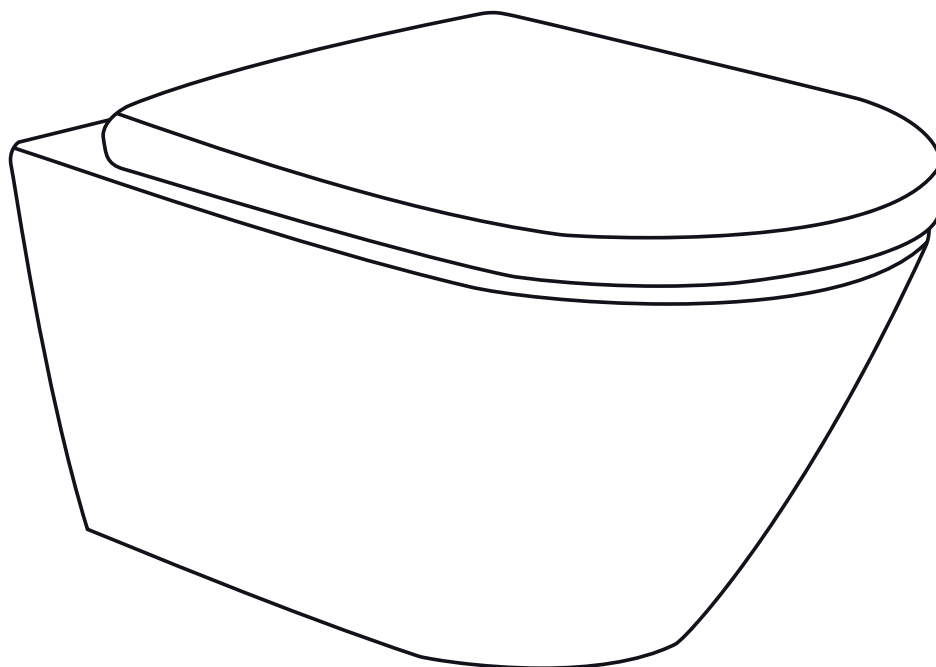
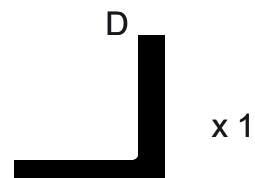
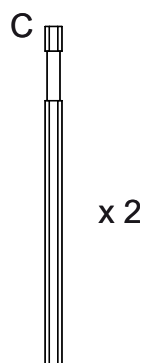


INSTALLATION INSTRUCTIONS

KUBE X RIMLESS WALL HUNG TOILET

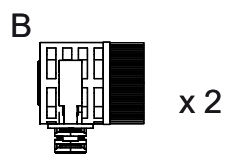

WALL HUNG KIT PARTS

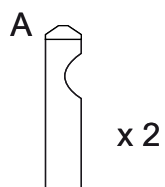

Distributed by:

Plumbline

Exceptional Bathrooms.
Exceptional Choice.

T 04 568 9898 E sales@plumblin.e.co.nz www.plumblin.e.co.nz

INSTALLATION INSTRUCTIONS

KUBE X RIMLESS WALL HUNG TOILET

GSI®

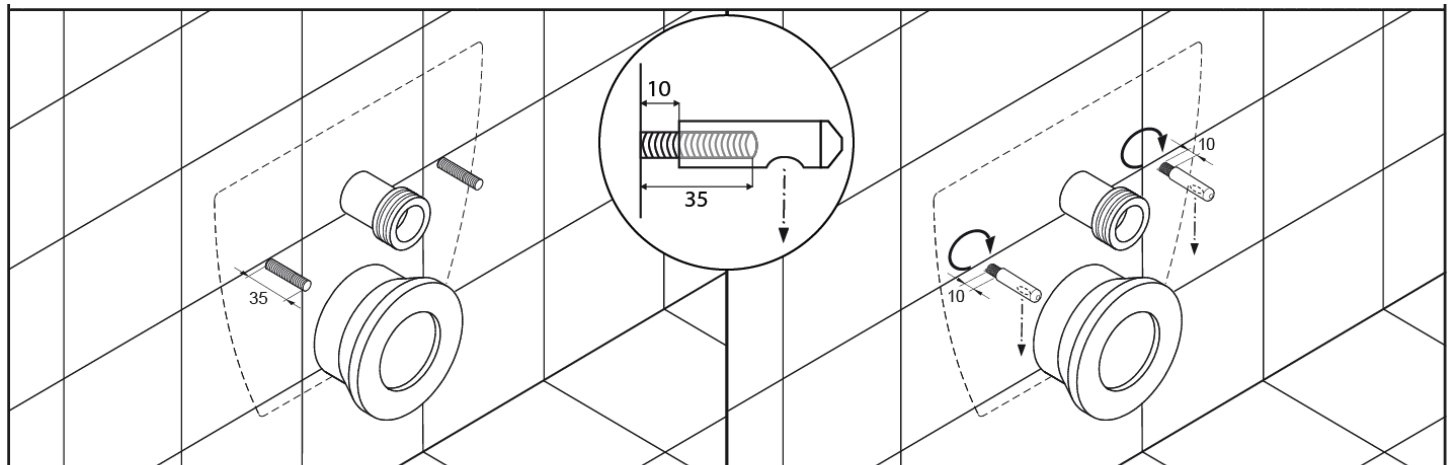


FIG. 1

FIG. 2

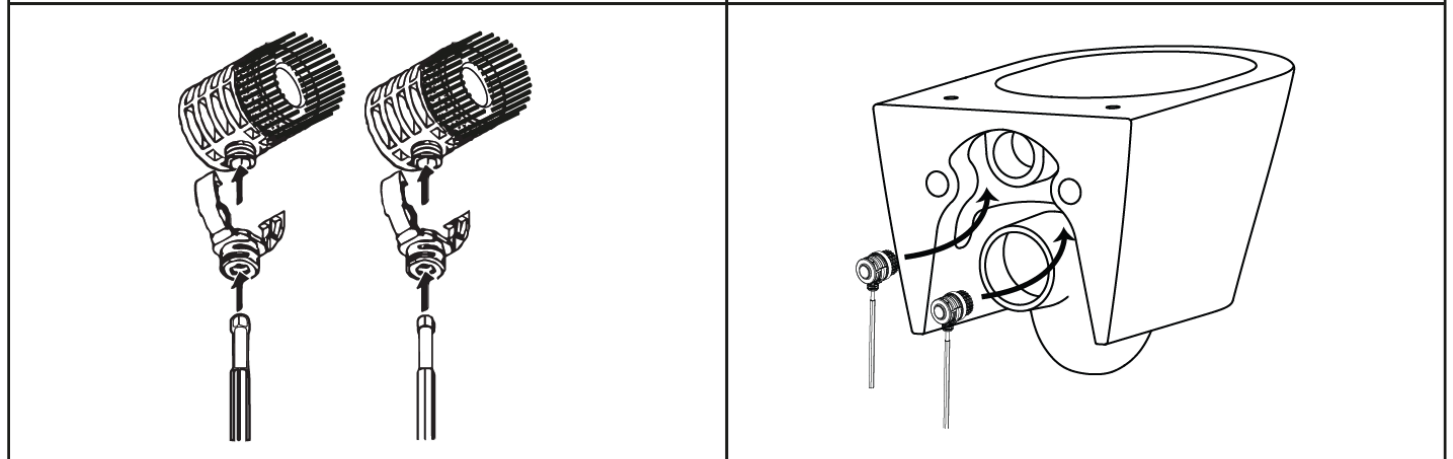


FIG. 3

FIG. 4

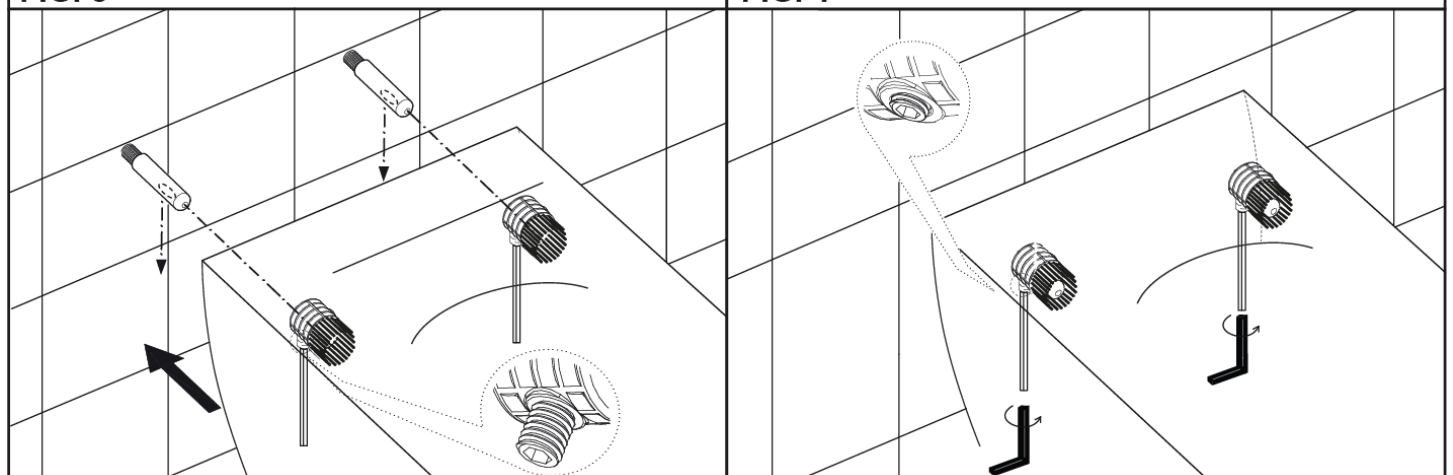


FIG. 5

FIG. 6

Distributed by:

Plumbline

Exceptional Bathrooms.
Exceptional Choice.

T 04 568 9898 E sales@plumblin.co.nz www.plumblin.co.nz