


Builder Project Twin Shower

Nero



Versions:202401

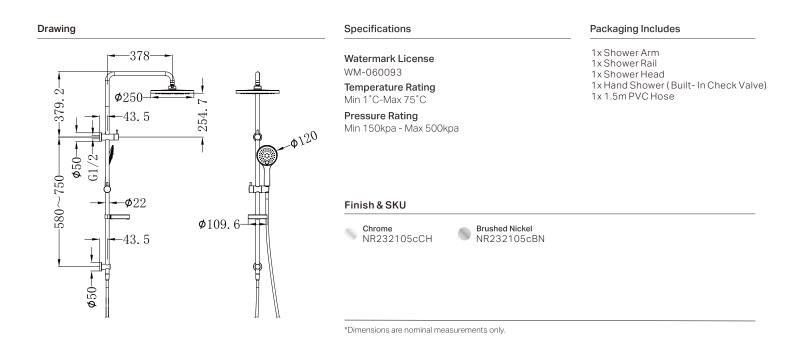


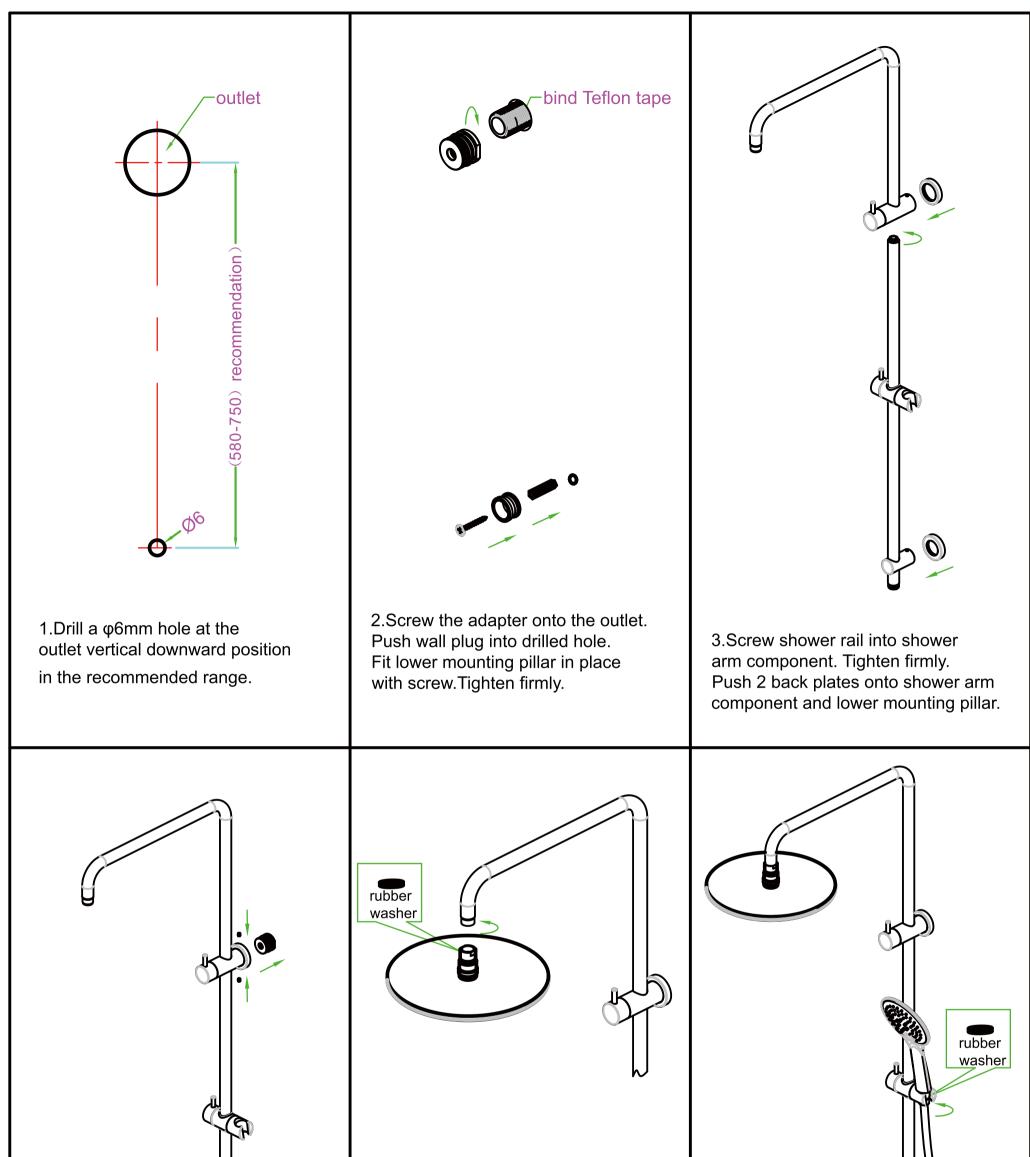



4. Locate and push shower rail assembly onto wall adaptors.Tighten grub screws firmly with allen key provided.Slide the back plates against the wall/tile face properly.

5.Screw shower head to shower arm with care. (Note the rubber washer in the shower head.)

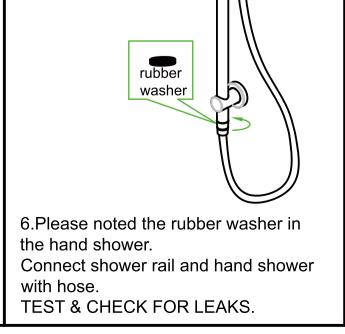

www.nerotapware.com.au Builder Project Twin Shower – Manual

Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

