

## Kara Progressive Shower Mixer Trim Kits Only

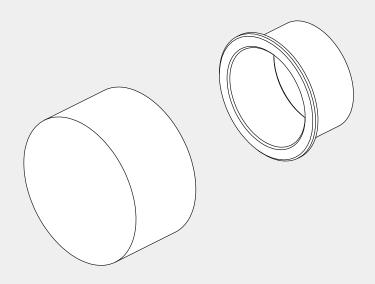


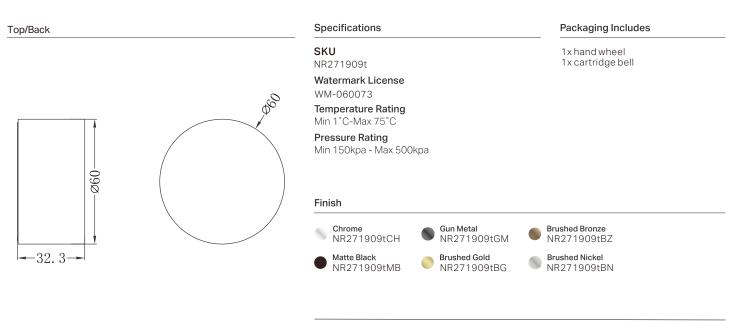


Versions:202311




## Installation Instruction For Trim Kits

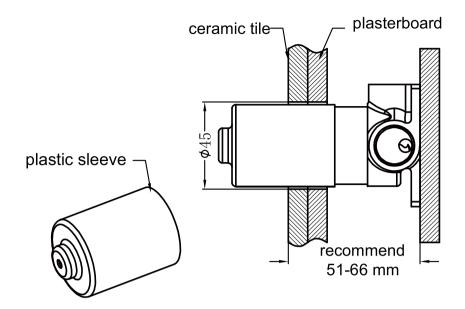

1. Remove plastic sleeve.

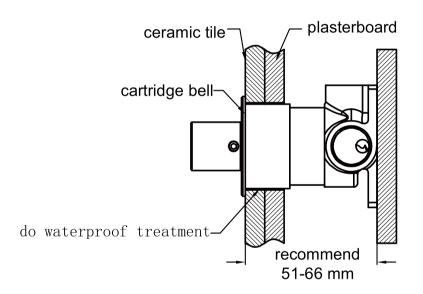

2.Put cartridge bell onto body and do waterproof treatment for the gap between cartridge bell and plasterboard and ceramic tile.

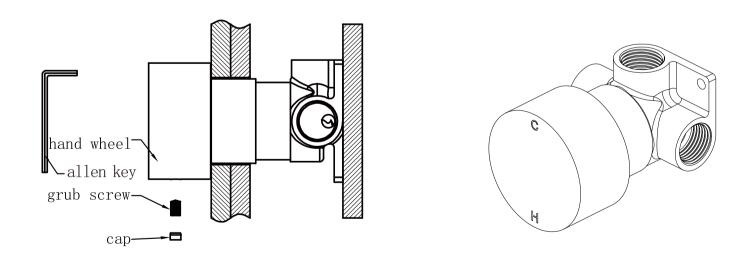

3. Make hand wheel into connecting rod, turn the hand wheel counterclockwise to the end. Then reinstall the hand wheel, make the "C" should be on twelve o'clock direction and "H" on the six o'clock direction, according to above picture. Then tighten grub screw of hand wheel by allen key, put cap into hand wheel.

## Nero