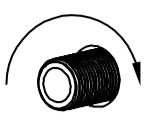
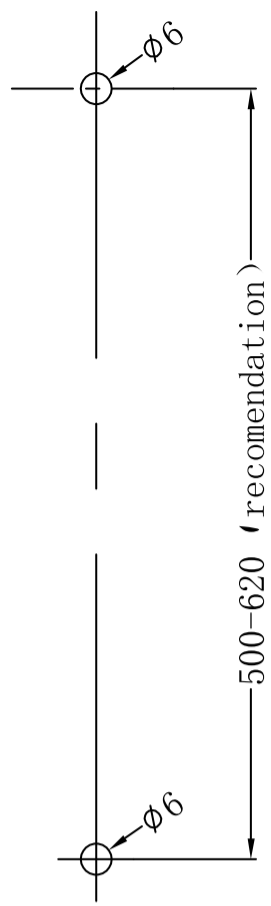

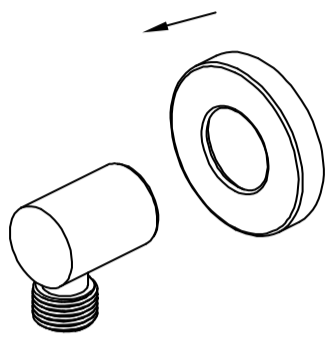
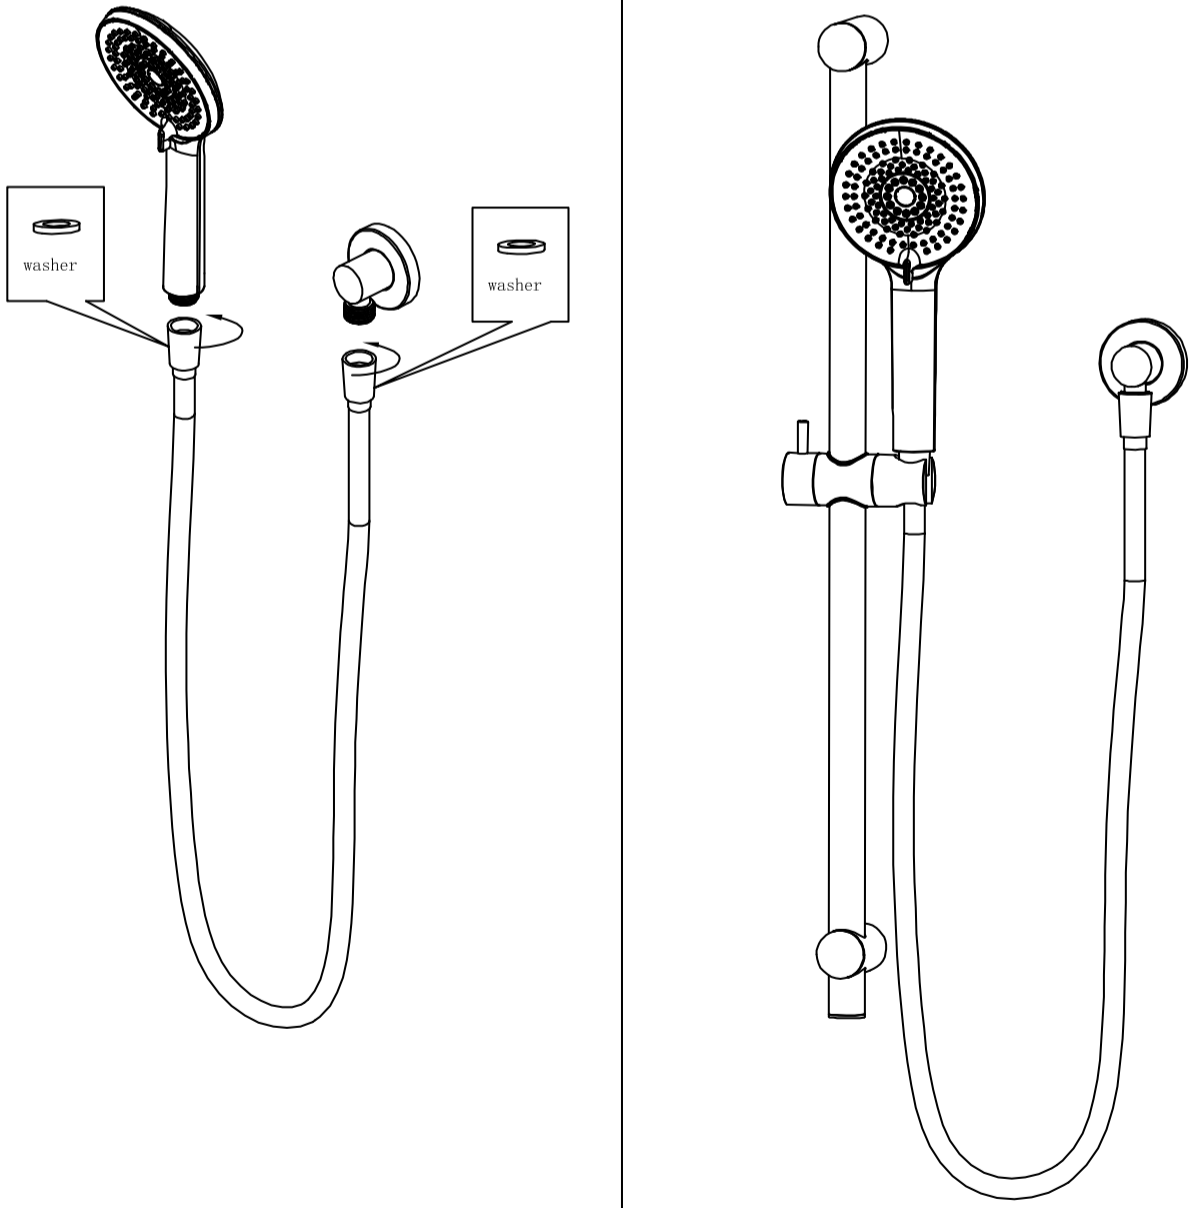
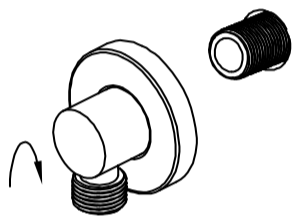
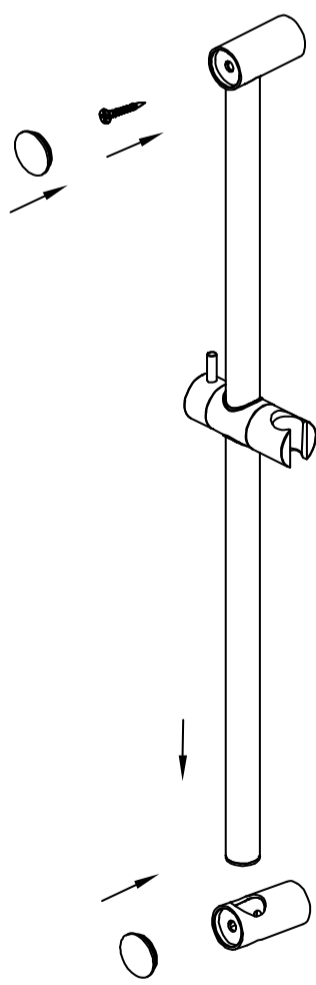


| | | |
|---|---|---|
| <p>use Teflon tape</p>  <p>1. Put Teflon tape on outlet thread.</p> |  <p>4. Drill two $\phi 6$mm holes according to above picture.</p> |  <p>5. Mount bottom bracket on the $\phi 6$ hole by expansion plug and tapping screw.</p> |
|  <p>2. Pull dressing ring on the elbow body.</p> | |  <p>7. Connect hand shower with outlet by shower hose</p> <p>8. Test for leaks.</p> |
|  <p>3. Screw elbow body on to outlet.</p> | | |
|  <p>6. Plug shower rail in bottom bracket. Mount top bracket on the top hole by expansion plug and tapping screw. Push plates onto two brackets.</p> | | |

Nero

info@nerotapware.com.au
nerotapware.com.au

11-13 Buontempo Road
Carrum Downs Vic 3201

