

## PLUMBERS INSTALLATION INSTRUCTIONS

### Important Information

- \* Wall anchor (1) is only suitable for use in cavity walls with a tiled surface. If installing into a plasterboard cavity wall (untiled) it is recommended that bathroom shelf be attached to the wall in line with a stud or noggin using suitable screws.
- \* For cavity wall applications, the total wall thickness must be 8-16mm when using the supplied wall anchors.
- \* Before drilling check position of mounting holes are in a line.
- \* Centre to centre of mounting holes is 75mm (Fig. 1)
- \* Do not use bathroom shelf for personal support.
- \* Over time, the mounting screws which are used to install the product may be affected by exposure to water, which may cause the screws to rust and loosen. You should periodically check that your bathroom shelf is fastened securely to the wall.

### Installation

**Solid Walls:** - (Brick, masonry blocks, concrete etc)

- i) Drill holes 6mm diameter, 40mm deep.
- ii) Insert rounded end of wall plugs (2) into drilled holes and push in until flush with the wall surface.
- iii) Fit screws (3) in mounting washers (4) then through holes in bathroom shelf (8) before screwing into wall plugs (2).
- iv) Ensure bathroom shelf is level and tighten screws (3).
- v) Cap (7) can now be attached to mounting washer (4).

**Tiled Cavity Walls:** -(Plasterboard/tile, fibre cement sheet/tile)

**Note:** Total wall thickness must be between 8-16mm when using the supplied cavity wall anchor (1).

- i) Drill holes 8mm diameter.
- ii) Flatten barbs on head flange of wall anchors (1). Insert the wall anchors (1) into the drilled holes until the head flange is against the wall surface.
- iii) Fit screws (5) with washers (6) in mounting washers (4) then through holes in bathroom shelf (8) before screwing into wall plugs (1).
- iv) Ensure bathroom shelf is level and tighten screws (5).
- v) Cap (7) can now be attached to mounting washer (4).

**Untiled Cavity Walls:**-(Plasterboard)

- i) Determine a suitable position to attach bathroom shelf (8) so that they can be fixed to a stud or noggin in the wall.
- ii) Fit screws (3) in mounting washers (4) then through holes in bathroom shelf (8) before screwing into stud or noggin.
- iii) Ensure bathroom shelf (8) is level and tighten screws (3).
- iv) Cap (7) can now be attached to mounting washers (4).

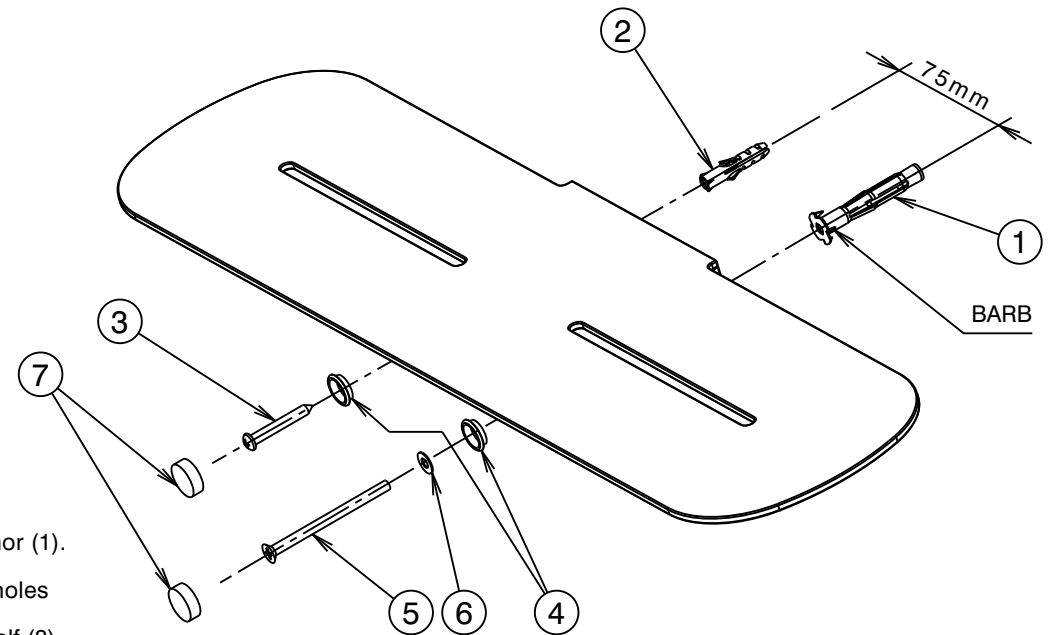


Fig. 1